 
# PLEASE READ BEFORE PRINTING

Print page 2 of this document at 100% to ensure you are sizing yourself properly!

To double check your printing accuracy, compare the printed measure guides with a standard size ruler.



#### **Nasal Mask Measurement**

- 1. Using the ruler above measure the width of your nose.
- 2. Using your nose measurement, find your mask size in one of the charts below.

Size	*Advance
Small	*
Advance	

\* SleepWeaver Advance is one size fits most. If your nose measurement falls under 1 1/4 inches try SleepWeaver Advance Small first.


Size	Élan®
Small	
Regular	
Large	

### A. Measure width of nose: 1"

#### **Full Face Mask Measurements**

- 1. Find measurement A. using top ruler.
- 2. Find measurement B. using side ruler.
- 3. Using both measurements, find your mask size in the chart below.

Anew® Size	A. Measurement	B. Measurement
Small	1" to 1 1/4"	3 1/4" to 3 1/2"
Regular	1 1/4" to 1 1/2"	3 1/2" to 3 3/4"
Large	1 1/2" & Up	3 3/4" & Up

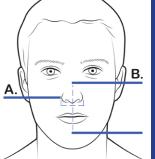


B. Measure from bridge of nose to center of chin: 3 1/4 in"

3 1/2 in"

NOTE: If your measurement falls between sizes on ANY mask, choose the SMALLER mask size.

 3 3/4 in"



#### **Nasal Mask Measurement**

- 1. Using the ruler above measure the width of your nose.
- 2. Using your nose measurement, find your mask size in the chart below.

Nose Size	*Advance	Advance Small	Elan®
Small			
Regular			
Large			


\* SleepWeaver Advance is one size fits most. If your nose measurement falls under 32mm try SleepWeaver Advance Small first.

## 25mm 51mm 32mm 38mm

#### **Full Face Mask Measurements**

- 1. Find measurement A. using top ruler.
- 2. Find measurement B. using side ruler.
- 3. Using both measurements, find your mask size in the chart below.

Anew® Size	A. Measurement	B. Measurement	
Small	25 to 32mm	83 to 89mm	
Regular	32 to 38mm	89 to 95mm	
Large	38mm & Up	95mm & Up	

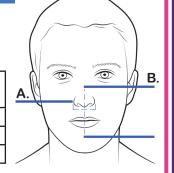

B. Measure from bridge of nose to center of chin:

83mm

25mm

5<u>1m</u>m

76mm

89mm

95mm